





Using of NSR-0801

- Diagnostics:

ØOperating status

ØArrangement quality and error indicator

ØConnector e.g. restart- signal, muting sensors

ØCalculation of safety distance

- Parametrisation of functions:

ØBlanking fix- and floating, beam coding, Relay control (EDM), start interlock

ØMuting

ØCycle,1 to 8 cycle

ØSaving of activ configuration



What is to consider - Hardware?

- 1) Switch- off power supply of SULG-A4
- 2) Connecting cable of control cabinet from SULG-A with NSR-0801

< emitter <u>or</u> receiver > (<u>do not</u> connect both at once)

Connection: Receiver for all functions

(Emitter for beam coding only)

- 3) Connecting cable box M12 from NSR-0801 to SULG-A
- 4) Switch-on power supply
- 5) Connecting USB- cable to PC/Laptop
- 6) Start software (more info next page)
- LED's on emitter signalise a connection with SULG-A4 and software (LED red and green flashing)



What is to consider - Software?

- 1) Unpack and install: SLC4Instkunde.zip
- 2) Start data file: installation.exe
- 3) Choose language: German or English
- 4) Install- Assistant: confirm twice
- 5) Start software receiver and emitter scale





NSR-0801 – Software

Change configuration:

- password required: 1 2 3 4



- Save settings
- Confirm within 10 seconds
- Save configuration to text file

Saving of configuration:

- Version with data of SULG
- Date and agent
- All specifications







safety distance calculate

